How to change front windshield wipers on **BMW E90** – replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:
BMW X5 (E70) xDrive 30 d, BMW X5 (E70) xDrive 40 d, BMW X5 (E70) xDrive 35 i, BMW X6 (E71, E72) xDrive 30 d, BMW X6 (E71, E72) xDrive 40 d, BMW 3 Touring (E91) 325i 3.0, BMW 3 Touring (E91) 318d 2.0, BMW X6 (E71, E72) ActiveHybrid, BMW 3 Saloon (E90) 318d 2.0, BMW X5 (E70) xDrive 50 i, BMW 3 Touring (E91) 318i 2.0, BMW 3 Touring (E91) 316d 2.0, BMW 3 Saloon (E90) 320d xDrive 2.0, BMW 3 Saloon (E90) 320i 2.0, BMW 3 Saloon (E90) 325i 2.5, (+ 62)

The steps may slightly vary depending on the car design.

REPLACEMENT: WINDSHIELD WIPERS – BMW E90. TOOLS YOU MIGHT NEED:



- Flat screwdriver
- Microfibre towel

BUY TOOLS

Replacement: windshield wipers – BMW E90. Tip from AUTODOC:


- Always replace front wiper blades together. It will ensure efficient and uniform cleaning of the windshield.
- Don't confuse the wiper blades of the driver and passenger side.
- The replacement procedure for both wiper blades is identical.
- All work should be done with the engine stopped.

REPLACEMENT: WINDSHIELD WIPERS – BMW E90. RECOMMENDED SEQUENCE OF STEPS:

1 Switch on the ignition. Pull the windscreen wiper stalk to the downward position.



2 Switch off the ignition. In the service mode, the wipers will be in the upper position.

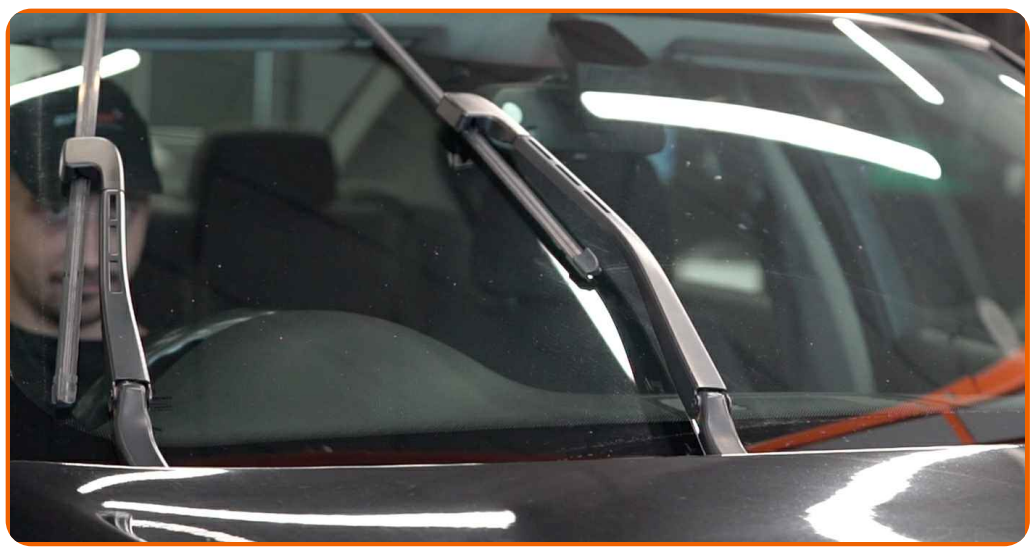

3 Prepare the new windscreen wipers.

4

Pull the wiper arm away from the glass surface until it stops.



5

Remove the windscreen wiper arm nut cover.



6

Turn the wiper blade by ninety degrees. Remove the blade from the wiper arm.



Replacement: windshield wipers – BMW E90. Tip from AUTODOC experts:

- When replacing the wiper blade, take caution to prevent the spring-loaded wiper arm from hitting the glass.


7 Install the new wiper blade and carefully press the wiper arm down to the glass.




Replacement: windshield wipers – BMW E90. AUTODOC recommends:

- Don't touch the wiper blade at the working rubber edge to prevent damage to the graphite coating.

8 Install the windscreen wiper arm nut cover.

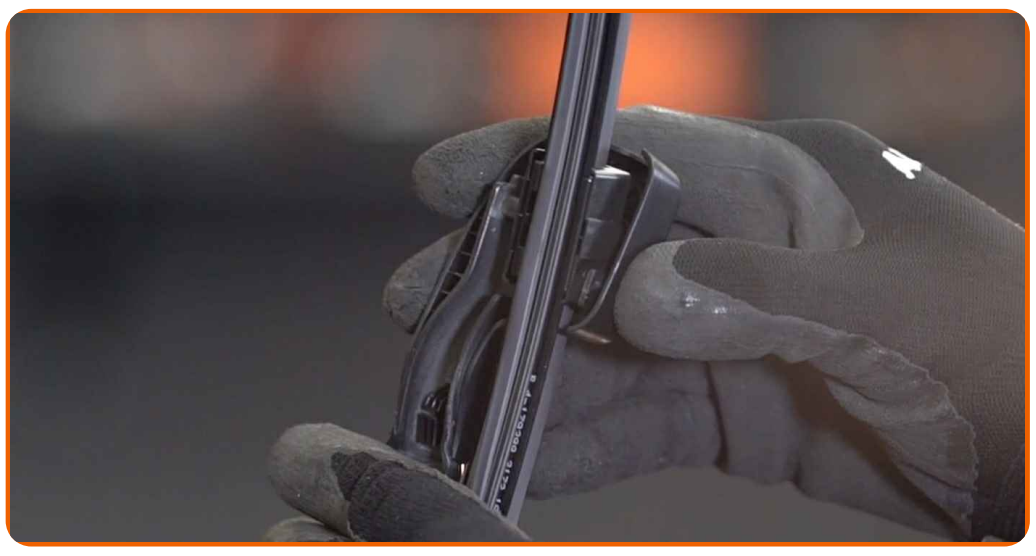


9 Switch on the ignition. Pull the windscreen wiper stalk to the downward position. By doing so, you will switch the windscreen wipers from the service mode to the operation mode.

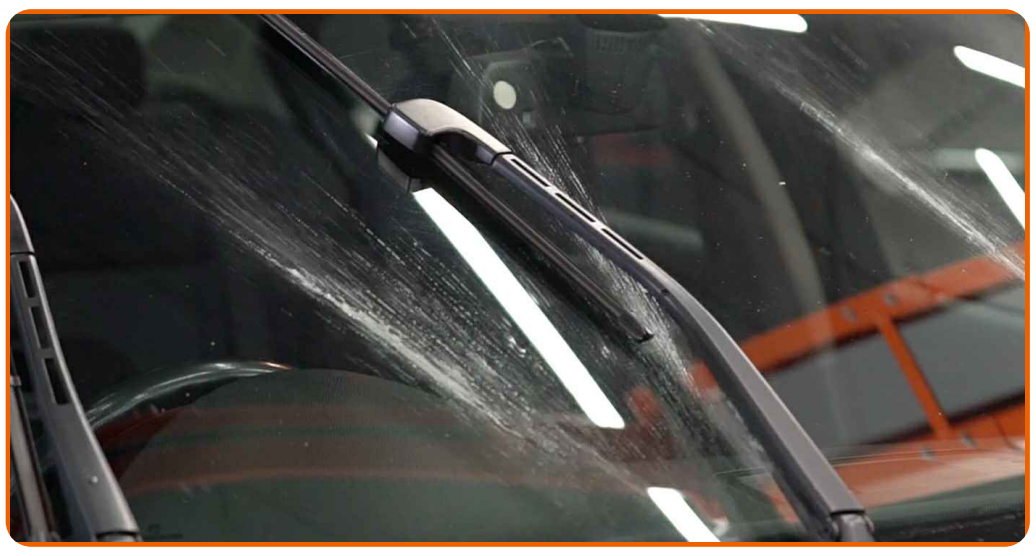

Replacement: windshield wipers – BMW E90. Tip:

- Ensure that the blade rubber strip fits tightly to the glass along the entire length.

10 After installation check the wipers performance. The blades shouldn't intersect or bump against the windshield seal.

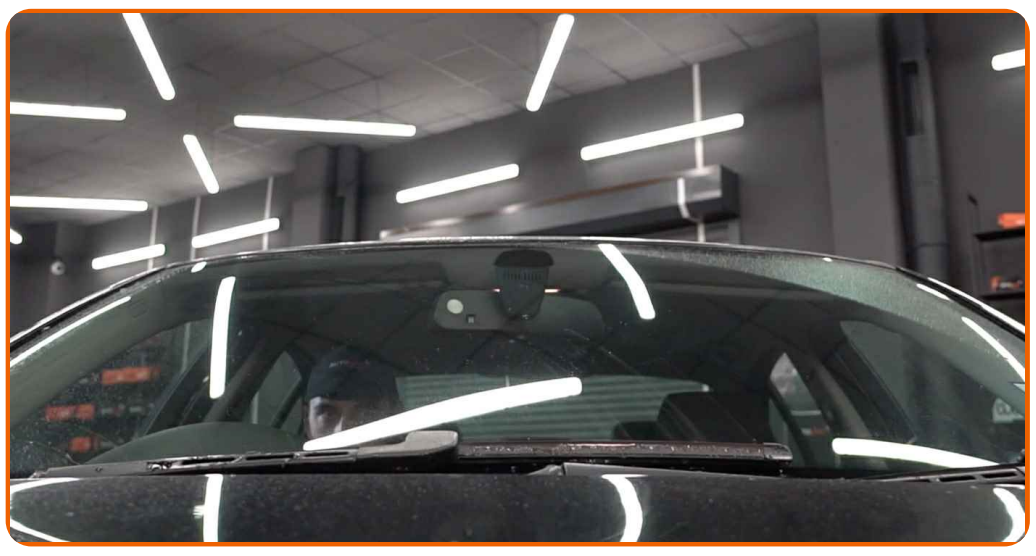

WELL DONE!

VIEW MORE TUTORIALS

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

WINDSHIELD WIPERS: A WIDE SELECTION

CHOOSE CAR PARTS FOR BMW E90

WINDSHIELD WIPERS FOR BMW: BUY NOW

WINDSHIELD WIPERS FOR BMW E90: THE BEST DEALS & OFFERS

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.